

Code Changing

BL7000 Easicode Change instructions



Fig.1

Step 1: Enter the currently programmed code into the keypad (**as per fig.1**).



Fig.2



Fig.3

Step 2: With the correct entered into the keypad the code change cam on the inside handle can be turned from the 9o'clock positioned black dot (**as per fig.2**) to the 12o'clock positioned black dot (**as per fig.3**).

Please note under no circumstances should you need to force the code change key, if you find the code change cam dose not move easily when using the supplied code change key, an incorrect code has been input into the keypad. In the event that the code change key is forced the code change spindle has been designed to twist prior to damaging the coding chamber and therefore you will not be able to change the code. If you require a replacement code change spindle Please call 01708 225700.



Fig.4



Fig.5

Whilst holding the code change cam at the 12o'clock position **(as per fig.3)** turn the handle on the keypad side one full rotation **(as per fig.4)**. When turning the handle a distinctive click will be heard, this denotes that the keypad has been cleared of any set code.

To ensure all the set codes have been cleared from the unit rotate the handle 3-4 times, each time the handle is rotated it should withdraw the latch bolt on the locking device.

With the handle at the horizontal position **(as per fig.5)** and the code change cam at 12o'clock **(as per fig.3)** a new code can be set to the keypad. Once you have decided what you would like the unit coded to press the buttons that will be in the new code

Please note if you make a mistake when setting the new code turn the handle one full rotation and this will clear any digits that has been set.

Now that all the digits in the code have been set into the keypad, the code change cam can now be rotated back to the 9o'clock position **(as per fig.2)**.

With the code change cam rotated back to the 9o'clock position **(as per fig.2)** the new code can now be tested. Input the new code into the keypad and rotate the handle, if setting the new code has been successful the latch bolt of the BL7000 will withdraw.

Ensure the keypad accepts the new code 3-4 times before closing the door and remember to make a note of the new code.

Please call our helpline for spares, repairs and technical advice – 01708 225700