

If the unit is to be fitted to a right hand hung door (hinged on the right) the unit is ready to be fitted. If the handing needs to be changed to suit a left hand hung door (hinged on the left) the following instructions will need to be followed.

Changing Keypad Handing

1. Turn the keypad over and remove the 2 screws either side of the spindle follower as per **Fig.1**.
2. Lift the cover plate off to expose the handing pin underneath as per **Fig.2**.
3. Remove the handing pin located in 'R' hole and rotate the handing disc clockwise so that the 'L' is on the bottom as per **Fig.3**.
4. Place the handing pin in the 'L' hole and refit the cover plate with the 2 screws. When refitting the cover plate, ensure that it is facing as per **Fig.4** and screws down flush.
5. Test the keypad to ensure that the knob is free rotating clockwise and solid when turning anti-clockwise.

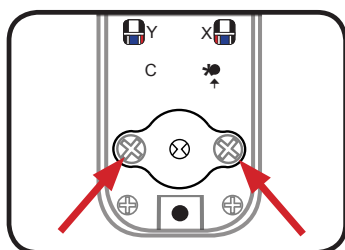


Fig.1

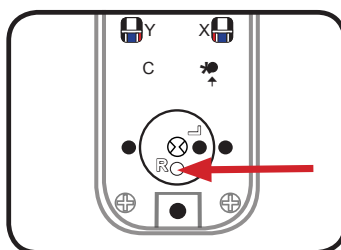


Fig.2

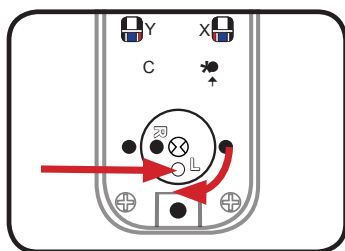


Fig.3

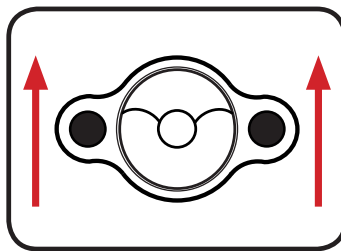


Fig.4

Changing Rim Deadbolt Handing

1. Turn the rim deadbolt over and remove the 4 screws as per **Fig.5**.
2. Lift the cover plate off to expose the deadbolt underneath.
3. Horizontally flip the deadbolt over to as per **Fig.6**.
4. With the deadbolt in position, refit the cover plate with the 4 screws.
5. Test the deadbolt to ensure that the knob throws and withdraws the deadbolt.

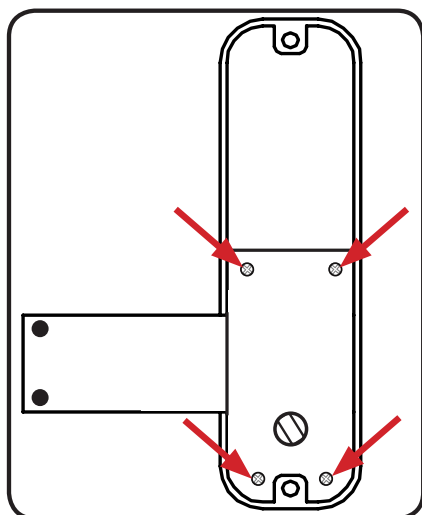


Fig.5


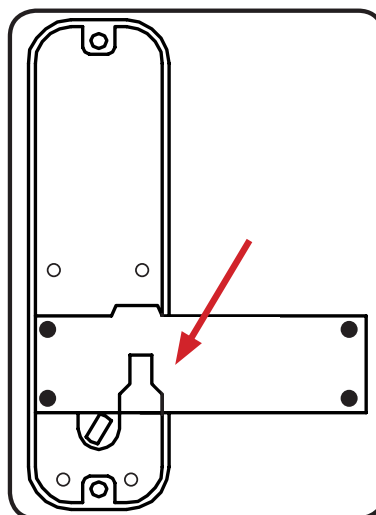


Fig.6

Easicode Pro (ECP) Instructions V4

The following instructions are applicable for all 2000 ECP models.

The code should be changed with the door in the open position. To change the code you will need to know what the keypad is currently set to. The code can be changed with the unit fitted on/off the door.

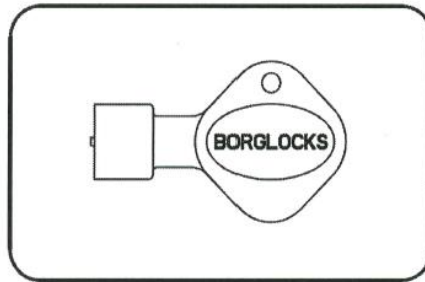

Code Change Key

1. Enter existing code
2. Using code change key - insert into the hole in the * button - fully press and hold until step 5
3. Press `C` button to clear the existing code
4. Enter the new code
5. Release the code change key from the hole in the * button
6. Press `C` to set the new code
7. The new code is now set and ready for use
8. Check that the code is working 5 times and that it is withdrawing the latchbolt in the door before closing the door.

Please note: If a mistake is made whilst entering a new code (with the * button pressed) the `C` button can be pressed which will cancel any buttons that have been pressed and you can start again.

Fitting & positioning the spindle

Non key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 overleaf**) when viewed from the outside (keypad side) of the door. Use the longest spindle supplied to ensure that it does not move out of position when fitted to the door.

Further fitting & positioning the spindle instructions overleaf

BORG LOCKS (UK) LTD

9, Upminster Trading Park, Warley Street, Upminster, Essex, RM14 3PJ
T: 44 (0)1708 225700 F: 44 (0)1708 226338
sales@borglocks.com www.borglocks.com

Fitting & positioning the spindle

Non key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 below**) when viewed from the outside (keypad side) of the door. Use the longest spindle supplied to ensure that it does not move out of position when fitted to the door.

Key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 below**) when viewed from the outside (keypad side) of the door. The spring located around one side of the spindle should be between the keypad and the side of the latch to ensure the spindle is reaching the cylinder in the keypad.

If the spindle needs to be cut down - the only side which should be cut is the side for the inside handle. The keypad side should not be cut at all as the entire bladed part of the spindle is required to reach the back of the cylinder to allow the key override function to operate correctly.

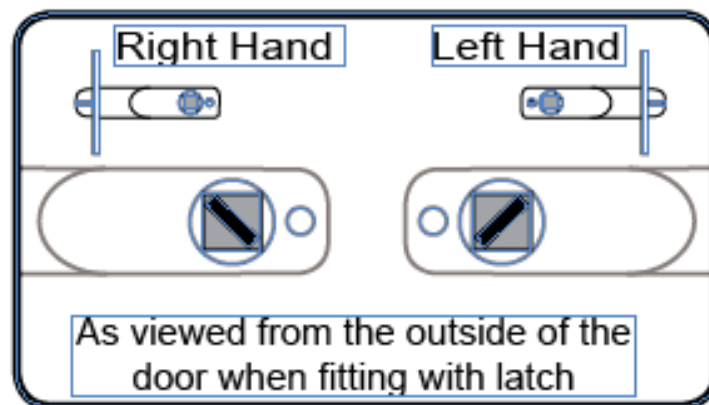


Fig.1




BORG LOCKS (UK) LTD

9, Upminster Trading Park, Warley Street, Upminster, Essex, RM14 3PJ

T: 44 (0)1708 225700 F: 44 (0)1708 226338

sales@borglocks.com www.borglocks.com

Assembling and Fitting

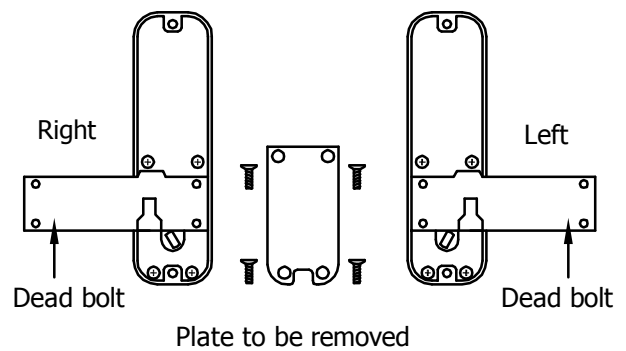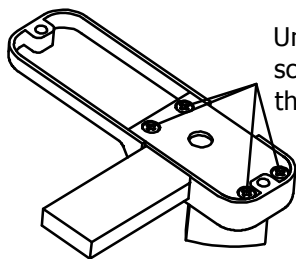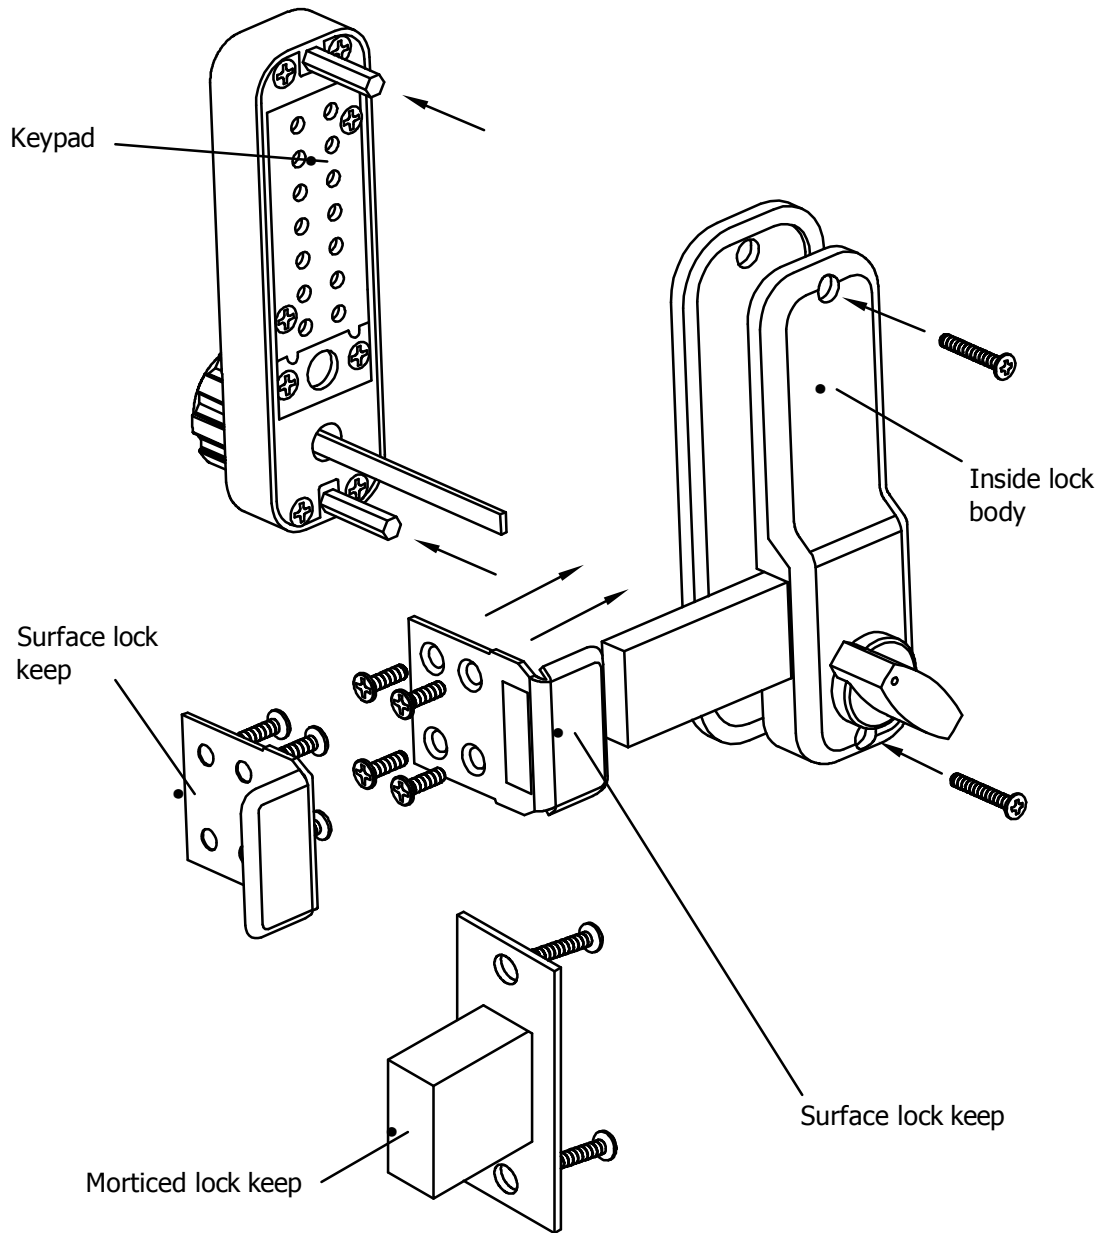

MAINTENANCE INSTRUCTIONS

WEEKLY

CLEAN THE SURFACE OF THE LOCK WITH MARINE GRADE CHROME POLISHING LIQUID. SPRAY THE EXPOSED PARTS OF THE LATCH WITH WD40 OR EQUIVALENT.

ANNUALLY

1. REMOVE THE LOCK FROM THE DOOR.
2. SPRAY THE INSIDE OF THE LOCK THOROUGHLY WITH WD40 OR EQUIVALENT, THROUGH THE TUMBLER HOLES AT THE BACK OF THE LOCK.
3. SPRAY ALL THE FIXING ACCESSORIES AND THE LATCH WITH WD40 OR EQUIVALENT.
4. PUSH EACH OF THE BUTTONS AND ROTATE THE KNOB SEVERAL TIMES TO MAKE SURE THE LOCK IS WORKING SMOOTHLY.

REMARKS

THE ABOVE MAINTENANCE PROCEDURES CAN BE CARRIED OUT WHENEVER THE OPERATION OF THE LOCK IS STICKY.