



The code should be changed with the door in the open position. To change the code you will need to know what the keypad is currently set to and have the code change tool (Part No. SECP02)


The code can be changed with the unit fitted on/off the door. The unit is non sequential, therefore if the code is set to 12234, the keypad will open if entered 43221, 32214 etc..There are over 4000 different code combinations available.

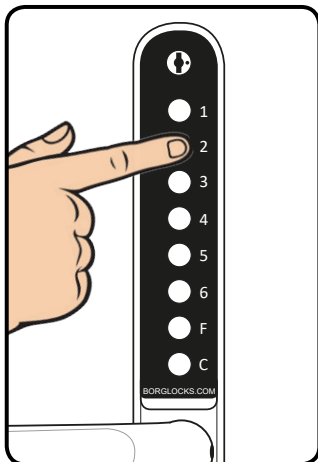


1. Enter existing code

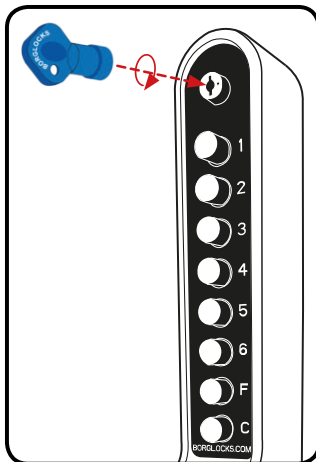


2. Using the code change key, insert over the  button in the top centre of the keypad. Rotate the code change key 90° right (clockwise) then press and hold the key (until step 5).

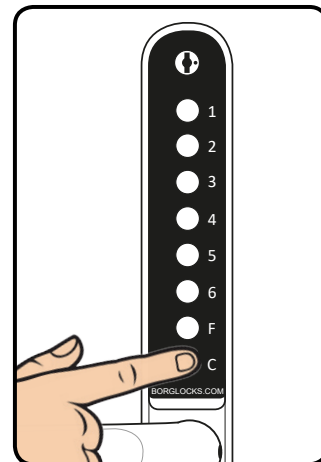


3. Press 'C' clear button to clear the existing code.

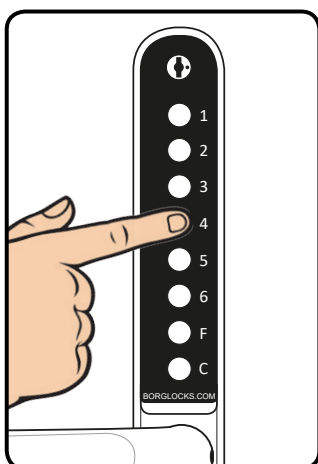

4. Press the digits that are to be in the new code. **Please note, if a mistake is made whilst entering a new code (with the  button rotated and pressed) the 'C' clear button can be pressed, which will cancel any buttons that have been pressed and you can start again.**

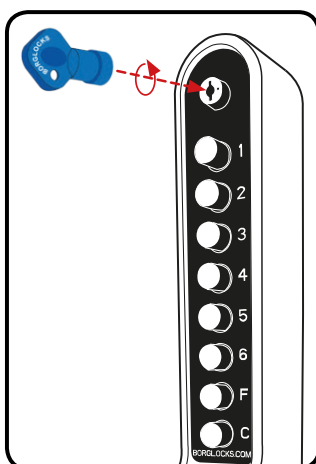

5. With the new code entered, the code change key can be removed by releasing the pressure and rotating 90° left (anti-clockwise) and removing the key from the  button.

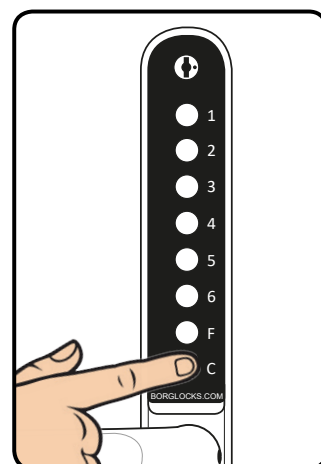

6. Press the 'C' button or turn the keypad handle to set the new code.

7. The new code is now set and ready for use.

8. Check that the code is working 5 times and that it is withdrawing the latchbolt in the door, before closing the door.

If a new code has been set and it does not work, the 'C' button has not been pressed when clearing the old code and before inputting the new code; therefore the code will be a combination of the new and old code i.e. if the old code was 1234 and the new code is 6789 the code actually set is 1234 6789. Input both the old and new codes and follow the code change from step 1. If the code has been changed and the keypad lever is free turning and opening the door, the new code has not been set. Follow the code change instructions from step 2.