

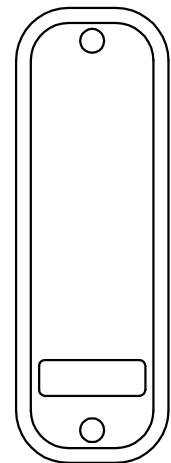
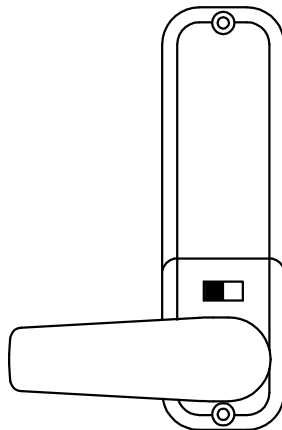
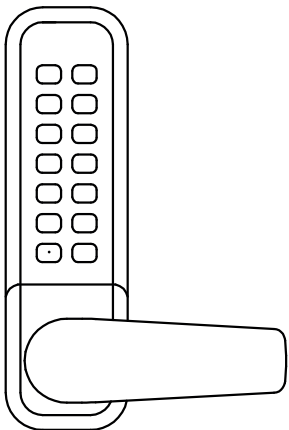
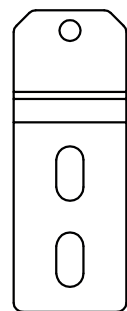


# BL4402 MG Pro ECP Parts List

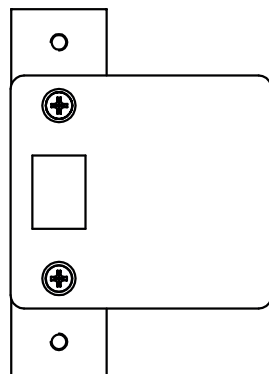

×2

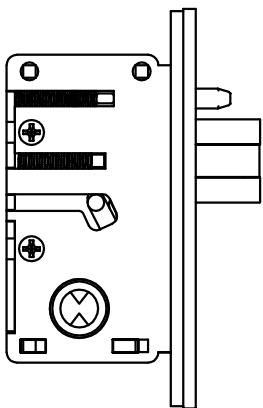

×2



×8    ×4    ×8



×1



×1



×1




×2




×2




×2



×2

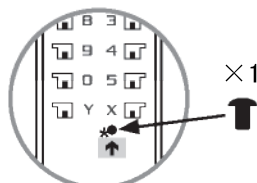

×1



**Borg Locks (UK) LTD**

Unit 9 Upminster Trading Park  
Warley Street, Upminster  
Essex RM14 3PJ

t. +44 (0) 1708 225700 f. +44 (0) 1708 226338  
[sales@borglocks.com](mailto:sales@borglocks.com) [www.borglocks.com](http://www.borglocks.com)

## Aluminium Strike Plate Fitting Instructions

1. The strike plate comprises of three parts which are screwed together. To fit the strike it must be taken apart first.
2. Mark the position for the centre of the latchbolt onto the door frame; this will help when aligning the strike plate.
3. Position the plastic box keep onto the frame and mark around it and also mark the centres of the two holes on the frame.
4. Drill out the two holes (very top & very bottom) for the rectangular securing plate into the frame of the door.
5. Cut out a section of the frame to accept the plastic box keep.
6. Insert the rectangular securing plate into the hole in the door and secure to the inside edge of the frame with two of the machine screws from the accessory pack.
7. Fit the plastic box keep into the recess of the rectangular securing plate.
8. Position the strike plate over the box keep and secure in place using the two screws.

